# Controlling Your TV with the Supplied Remote

By adjusting the remote signal, you can control your TV with the supplied remote.

## Controlling TVs with the remote

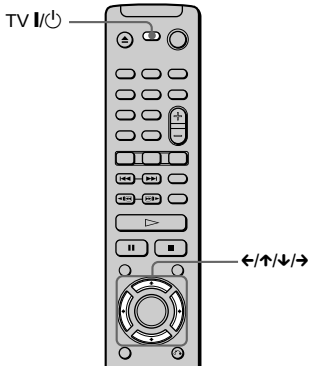


1 Hold down TV I/⏻, and enter your TV's manufacturer's code (see the table below) using ←/↑/↓/→.

2 Release TV I/⏻.

### Manufacturer's codes of controllable TVs.

| Manufacture | Press ←/↑/↓/→ to input code |
|---|---|
| Sony (default) | ↑ ↑ |
| General Electric | ↑ ← |
| JVC | ↓ ↑ |
| Panasonic | → → |
| Philips | ↑ → |
| Quasar | → ↓ |
| RCA | ↑ ← |
| Samsung | ↓ → |
| Sanyo | ↑ ↓ |
| Sears | → ← or ↑ ← |
| Sharp | → ↓ |
| Toshiba | → ← |
| Zenith | → ↑ |

**Notes**

- If you enter a new manufacturer's code, the code previously entered will be erased.
- When you replace the batteries of the remote, the code you have set may be reset to the default setting. Set the appropriate code again.

### Controlling the TV

By adjusting remote signal, you can control the sound level, input source, and power switch of your TV with the supplied remote.

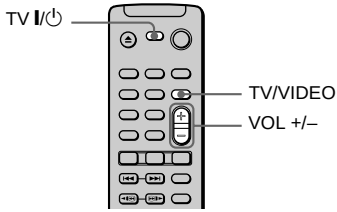


You can control your TV using the buttons below.

| By pressing | You can |
|---|---|
| TV I/⏻ | Turn the TV on or off |
| VOL (volume) +/– | Adjust the volume of the TV |
| TV/VIDEO | Switch the TV's input source between the TV and other input sources |

**Note**

Depending on the units being connected, you may not be able to control your TV or to use some of the buttons.